
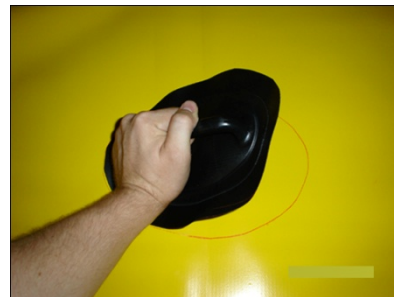


INSTALLATION OF GRAB HANDLES

Instructions:

1. Select area on side wall of liner where you want the handles. (Most effecient mounting)
“Side wall mounting helps prevent firefighter from falling in the tank and also prevents water appliances from snagging.”
2. Use marking pen to trace around the patch.
3. Clean area with scrub pad that has been traced.
4. Then use scrub pad on the handle patch to prep.
5. Use alcohol pad to clean both prepped areas.
6. Apply adhesive to both areas.
7. Let both areas get tacky to the touch.
8. Apply handle to liner floor and smooth out with seam roller.
9. Put weight on the patch area and let cure over night.

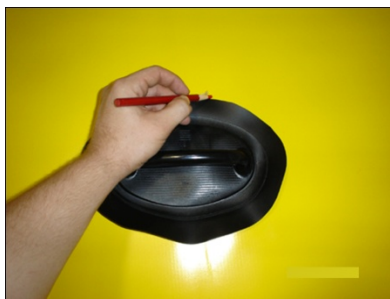

Contents:

Grab handles

1-pt. adhesive

1-scratch pad

1-seam roller

2-alcohol prep pads